



USER'S MANUAL



Model: BC-W229B

18x6in1 Led Wall Wash Light (Single Layer)

Package Includes:

1 x led wall wash light

1 x power cable

1 x DMX cable

Please read this manual before use

● Features

1. Voltage:AC 110-260V, 50/60Hz
2. Power:200W
3. Lamp:18PCS*6in1 LED
4. Packing Size: 110*15*21CM
5. Net Weight: 9.5Kg
6. Gross weight:10kg
7. Colorful color
8. automatic / online synchronization Strobe mode
9. multi-channel mode DMX512 Console

● Safety precautions

1. To ensure that the local voltage and the required voltage for product is consistent.
2. If a product's power cord is damaged, please do not try to use the product. Do not try to unplug the power cord from the ground plug. Plug is used to reduce short-circuit electric shocks and fire prevention.
3. Before making any connections disconnect the main power supply.
4. In any case, please do not remove the lid, which is not part of the user can use.
If the product of the shell is missing, please do not run product.
5. Do not stuff the products to the dimmer package.Guarantee that the product in the ventilate place ,and maintained between the product and the wall 6 feet (15 cm) distance.
6. If damaged, please do not run product.
7. If the long-term non-use products, please disconnect the power.
8. Make sure the product located in a safe and stable place.
9. Special attention to the power cord from being pinched or out of product.
10. Cleaning :
In accordance with the manufacturer's recommendation to clean products' fixed position. Please read the "cleaning" in detail.

● Heat output

1. Devices should be away from heat sources such as radiator, heater, warm furnace or other devices generate heat.
2. In the following circumstances, the fixed installations are required to qualified service personnel overhaul:
 - A. When the power cord or plug is damaged.
 - B. The product fall or when the liquid outflow the device.
 - C. When the device does not work correctly, or have some change in the exhibition.

● Installation of power

At the time of switching in power, make sure that the voltage in your area is consistent with the the led spot light's voltage. This for AC110-240V. Since different parts of the voltage is different, so products in operation, make sure your wall outlet voltage consistent with the product.

● DMX combination

In order to ensure a fixed DMX data transmission, when using several DMX device to the fullest extent possible use the shortest cables. Fixtures connected to the DMX channel order does not affect the choice of DMX. For example:when the allocation of fixed installations DMX 1 channel, DMX will be located in any location, in the front, back or middle of anywhere. When the fixed installations assigned to DMX 1 channel, whether it is located in which of the DMX channels, DMX controller is aware that the data sent on the channel one.

● Usage mode

You can use the following four ways:


Automatic ---- This section will automatically operate through a variety of colors .

RGBW Mode ---- select a color or a different color in order to maintain the same state.

DMX control mode --- This function will be under the standard of DMX512 controller, let you control each device separately.

● LED display

The digital display like below:

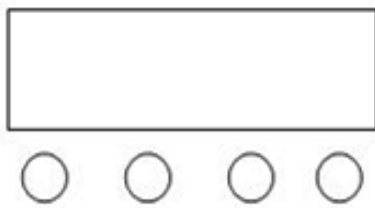

A: Menu
 B: Up
 C:DOWN
 D:Enter

A B C D

No	LED display	function
1	A001	10CH DMX address
2	25CH	11/84/95CH
3	CC00	Color Jump change
4	Ed00	Mixed color change gradually
5	ER00	Color running change 1
6	Po00	Color running change 2
7	Tr00	Running style1
8	TU00	Running style2
9	BE50	Sound mode
10	R255	Red
11	G200	Green
12	B200	Blue
13	W200	White
14	Y200	Amber
15	I200	Purple
16	ID00	Lights connecting effect

● CHANNEL TABLE

◆ 11 CHANNEL

CHANNEL	VALUE	FUNCTION
CH1	0~255	Dimmer

CH2	0~255	Strobe slow--fast
CH3	0-255	0-35: DMX control 36-245: color change (each value 10 is a new effect) 246-255: sound-active
CH4	0-255	0-30 no effect 31-255: (each value 15 is a change effect) (0-127 is running water effect: left. 128-255 is running water effect: right)
CH5	0-255	Speed slow-fast
CH6	0~255	Red
CH7	0~255	Green
CH8	0-255	Blue
CH9	0-255	White
CH10	0-255	Amber
CH11	0-255	Purple

◆ 25 CHANNEL

CHANNEL	VALUE	FUNCTION
CH1	0~255	Dimmer
CH2	0~255	Strobe slow--fast
CH3	0-255	0-35: DMX control 36-245: color change (each value 10 is a new effect) 246-255: sound-active
CH4	0-255	0-30 no effect 31-255: (each value 15 is a change effect) (0-127 is running water effect: left. 128-255 is running water effect: right)
CH5	0-255	Speed slow-fast
CH6	0~255	Red
CH7	0~255	Green
CH8	0-255	Blue
CH9	0-255	White
CH10	0-255	Amber
CH11	0-255	Purple
CH12	0-255	RGBWA +UV(1)
CH13	0-255	RGBWA +UV(2)

.....
Ch25	0-255	RGBWA +UV(18)

● Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic menstruum avoiding to damage the product.

● Statement

The product has well capability and intact packing when leave factory. All of the user should comply with above warning item and manual,any misuse cause of the damages are not included in our guarantee,and also can't be responsible for any malfunction & problem owing to ignore the manual. Please forgive that we will not be notice for technical change

ShenZhen BECEN Stage Equipment Co., Ltd

Add: Room 501,5th floor,Yishenrong industrial park,Xihuan road,
ShaJing,BaoAn,Shenzhen,GuangDong,China

Website: www.szbecen.com

www.becenstage.com

Tel: 86-13410588234

Email: sales01@szbecen.com

sales02@szbecen.com



Scan it to get more info.